


CLEANING INSTRUCTIONS

Cleaning instructions for BLANKE LINEAR DRAINAGE UNITS:

- > BLANKE DIBA-LINE 2.0 and BLANKE DISK-LINE
- > BLANKE DIBA-LINE EC and BLANKE DISK-LINE EC
- > BLANKE DIBA-LINE SL and BLANKE DISK-LINE SL
- > BLANKE DIBA FLEX-LINE and BLANKE DISK FLEX-LINE

General information

Limescale deposits from water, hair, skin particles, soap, shower gel, and shampoo contribute to contamination in the drain and channel area with daily use of the shower. These contaminants must be removed as needed. For easier cleaning, common household cleaners that are non-aggressive and non-abrasive can be used. These must not contain solvents or acids. Furthermore, the grate covers must not be cleaned with steel wool or wire brushes.

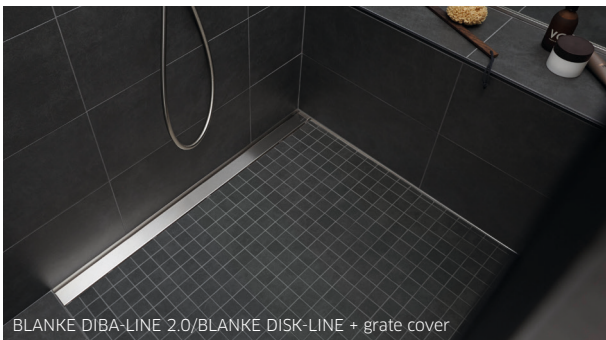

BLANKE DIBA-LINE 2.0 and BLANKE DISK-LINE



1 The grate cover is raised and lifted out using the grate lifter (white plastic lever) included in the scope of delivery.



2 Grip the siphon on both sides and press it out of the drain connection; this is towards the wall or away from the wall depending on the installation situation.




3 Remove coarse soiling in the channel body with flowing warm water and household cleaning products. A sponge or a brush is helpful here. The same procedure has to be applied on the siphon. Grease the insertion connector of the siphon prior to reinstallation (e.g. with fitting grease or Vaseline).

BLANKE DIBA-LINE EC and BLANKE DISK-LINE EC



1 The grate cover is raised and lifted out using the grate lifter (white plastic lever) included in the scope of delivery.

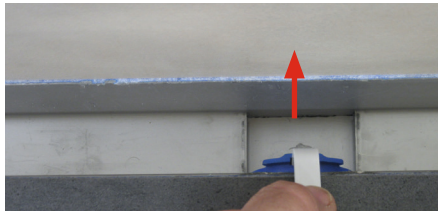


2 Grip the siphon on both sides and press it out of the drain connection; this is towards the wall or away from the wall depending on the installation situation.



3 Remove coarse soiling in the channel body with flowing warm water and household cleaning products. A sponge or a brush is helpful here. The same procedure has to be applied on the drain connection nozzle. Grease the sealing ring of the drain connection nozzle prior to reinstallation (e.g. with fitting grease or Vaseline).

BLANKE DIBA-LINE SL and BLANKE DISK-LINE SL

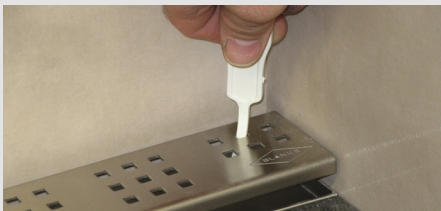

1 The grate cover is raised and lifted out using the grate lifter (white plastic lever) included in the scope of delivery.



2 Remove the hair sieve by hand.



3 Remove coarse soiling in the channel body with flowing warm water and household cleaning products. A sponge or a brush is helpful here. The same procedure has to be applied on the hair sieve. Rinse the drain with plenty of water prior to reinstallation.

BLANKE DIBA FLEX-LINE and BLANKE DISK FLEX-LINE



1 The grate cover is raised and lifted out using the grate lifter (white plastic lever) included in the scope of delivery.



2 Grasp the siphon by both side tabs and pull it upwards out of the BLANKE FLEX-LINE COVER. The siphon, which consists of two parts, can now also be taken apart.



3 Remove coarse dirt from the channel body and siphon using running water and standard household cleaners. A sponge or brush can be helpful here. Dry and lubricate the rubber lip in the cover (with faucet grease or petroleum jelly). Then reassemble in reverse order.

Attention: During installation please refer to the notes in our latest technical data sheets. All work must also be carried out in compliance with current industrial standards.

Blanke Systems GmbH & Co. KG

Stenglingser Weg 68-70
58642 Iserlohn/Germany

T +49 2374 507-0
F +49 2374 507-4230

E info@blanke-systems.de
I www.blanke-blue-base.com

Author: AWT 18.01.2018
Page 2 of 2